 
 




Arm Height Adjustment (Optional) - Press button under arm cap, adjust height and release button.



Pivoting Arm Caps (Optional)
Rotate the front end of the armrest inward or outward.



Arm Depth (Optional)
Slide the armrest forward or back.



Arm Width Adjustment (Optional) - Releasing the levers under the seat controls the arm width.



Lumbar support (Optional)
Rotate the knob to adjust tension.