

Tension Control Knob
Chair must be in upright position to activate tension. Pull out telescopic knob attached to height adjustment lever and turn clockwise to increase tension to desired comfort level and turn counterclockwise to decrease tension. Push in when desired tension is achieved.

Height Adjustment Control
To raise chair shift body weight up, pull lever up. To lower chair, remain seated and pull lever up.



Knee-Tilt mechanism
Features a convenient side tension adjustment and a multi-position tilt lock.