

Synchro-Tilt Mechanism

Models 8635 - 8636



Headrest Adjustment

Pull up or down to desired position. Pivot forward or back.

Tension Control Knob

Pull out telescopic knob attached to height adjustment lever and turn clockwise to increase tension to desired comfort level and turn counterclockwise to decrease tension. Push in when desired tension is achieved.

Back Height Adjustment

Lever on back of chair. Push up lever to raise or lower to desired height.

Height Adjustment Control

 
To raise chair shift body weight up, pull lever up. To lower chair, remain seated and pull lever up.

Synchro Tilt Control


To unlock, shift lever down, lean back to unlock, tilt to desired position, then pull lever up to lock. For forward tilt, pull lever out, then shift lever down, lean back to unlock, chair will automatically tilt forward.



Arm Height Adjustment (Optional) - Press button under arm cap, adjust height and release button.



 Pivoting Arm Caps (Optional)
Rotate the front end of the armrest inward or outward.



Arm Depth (Optional)
Slide the armrest forward or back.



Arm Width Adjustment (Optional) - Releasing the levers under the seat controls the arm width.